

TABLE OF CONTENTS

1. Description - Locker SL0020	1
2. Delivery set	2
3. Preparation	2
4. User manual	2
5. «Administrator» mode	3
6. Changing password	3
7. Alarm opening of cells	3
8. Electric connection	4
9. Shipping and storage	5
10. Frequently asked questions	5
11. Warranty	5
12. Warranty obligation	5

 


1. Description

Index

1. LCD-display shows: number of cell and PIN-code - ****
2. Keypad: 0 - 9 for entering the password, where «*» - Delete, «#» - Enter

1	2	3
4	5	6
7	8	9
*	0	#

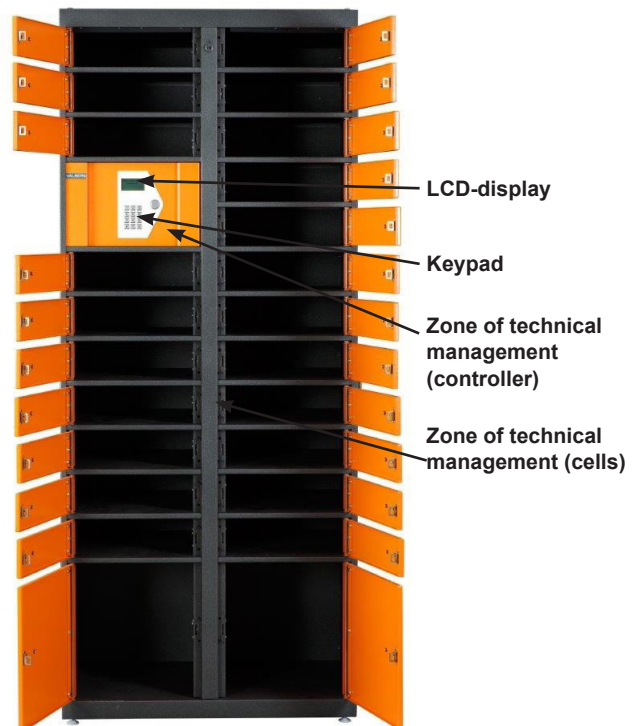

General view

2. Delivery set.

- Storage locker.
- 2 keys (+ 2 spare keys) for the technical zone of cells management
- Power supply
- Alarm opening tool.
- User manual.

3. Preparation.

Please follow this manual before launching

All the keys, tools and network cable are installed in the lower compartment of SLS. By shipping, the key for the lower compartment is situated on the top of SLS in the original packing.

1. Take the power supply unit out of the lower compartment. Close the compartment with the key (after that key should be passed to a person in charge).
2. Connect the network cable of the power supply unit to the connector situated on the back wall of SLS
3. The LCD-display will be activated. THE LCS-display shows the words «System initialization» All the free cells open.
4. Message on the screen «Number of cells -24. Free cells - 24»*.
*Number of free cells is indicated.
5. The SLS will work in standby mode – the message on the display: «Enter the number of cell and press #». SLS is ready to work.

Note: free cells are always open

4. User manual.

Putting objects in cell:

- The SLS has to work in standby mode - the message on the display: «Enter the number of cell and press #»
- Put object in cell.
- Close the door of the cell. The lock blocks the cell;
- The number of closed cell will be shown on the display;
- System waits for entering the PIN-code;
- Enter the PIN-code on the keypad (4 numbers) and press «#». If there is no errors, the display will show the message – «Accepted». If there is an error, the display will show the message – «Re-enter» and the input field will be cleared
- Memorize the entered PIN-code

Note:

The wrong number can be cleared with «*» (Recommendation: clear the PIN-code and re-start).

The PIN-code must be entered in 10 sec.

If the PIN-code is not entered, the cell opens. The message on screen – «OPENED».

The standby mode is on.



Withdrawal of objects from the cell:

Note:

All the occupied cells are closed. Management unit ensures the closing of doors.

1. The SLS has to work in standby mode - the message on the display: «Enter the number of cell and press «#»
 - Enter the number of cell (2 or 3 digits) and press «#».

Note:

If the cell is open, the following message appears «Error – Free cell».

- Enter PIN-Code (4 numbers) and press «#». If errors not found – cell opens.
If the entered PIN-Code is not the PIN-Code of the cell on the display appears the message «Error – wrong code».

If the user took the object from the cell and closed it, the display will show an invitation to enter the new PIN-Code. To reset it press «*», the cell will be opened

5. «Administrator» mode:

1. The SLS has to work in standby mode - the message on the display: «Enter the number of cell and press «#»
2. Enter «00» and press «#».
3. Enter the 6-number code and press «#». (Default code - «123456» need to be changed)
4. The display shows:
 - «Open all cells»;
 - «Open one cell»;
 - «Check the password of the cell»
 - «Change the password».
5. Choose the necessary section.

6. Changing administrator's password

1. The SLS has to work in standby mode - the message on the display: «Enter the number of cell and press «#»
2. Enter «00» and press «#».
3. Enter the 6-number code and press «#».
4. The display shows:
 - «Open all cells»;
 - «Open one cell»;
 - «Check the password of the cell»
 - «Change the password».
5. Choose «Change the password».
6. Enter the new 6-number code and press «#».
7. New password is activated.

7. Alarm opening of cells:

Option №1

Administrator can open the blocked cell using the following method:

1. The SLS has to work in standby mode - the message on the display: «Enter the number of cell and press «#»
2. Enter «00» and press «#».
3. Enter the 6-number code and press «#».
4. The display shows:
 - «Open all cells»;
 - «Open one cell»;
 - «Check the password of the cell»
 - «Change the password».
5. Choose «Open one cell»;
6. Enter the number of cell and press «#». The cell will be opened

 
Option №2

Administrator can open the blocked cell using the following method: open with the key the nearest to the cell zone of technical management and, using the tool, press the lock lever. The cell will be unblocked.




Zone of technical management of cells

8. Electrical connection of SLS

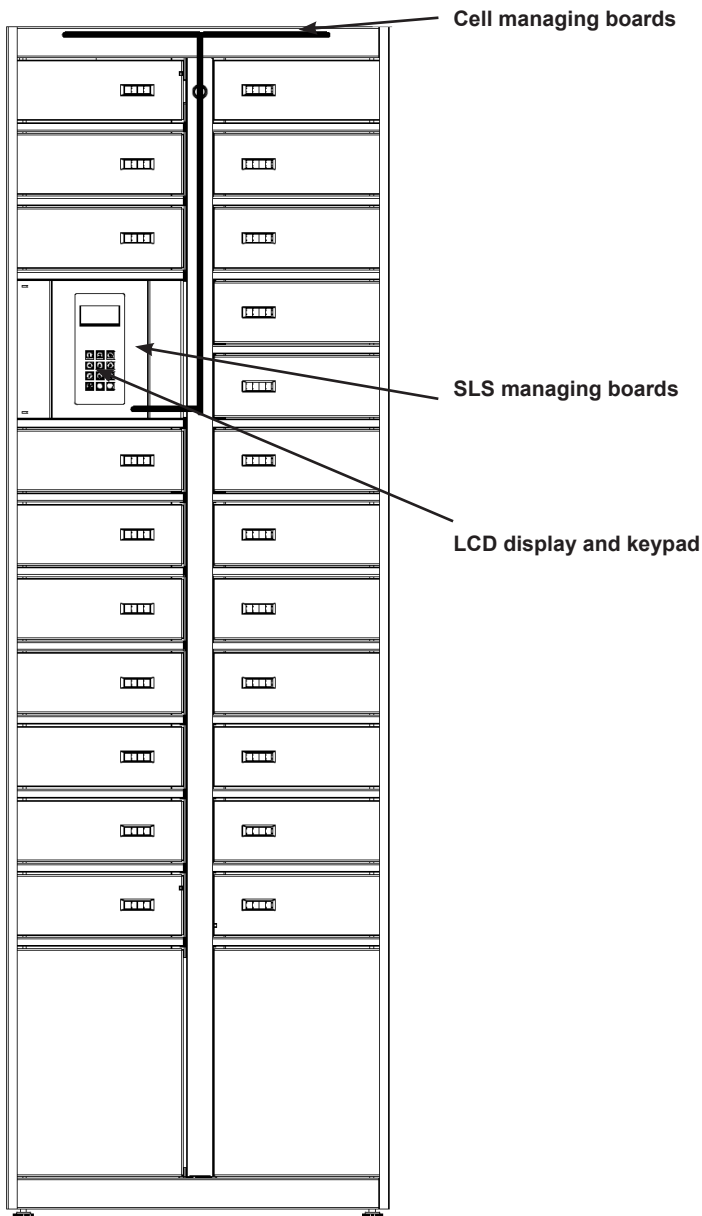

Wire connections in the control unit.

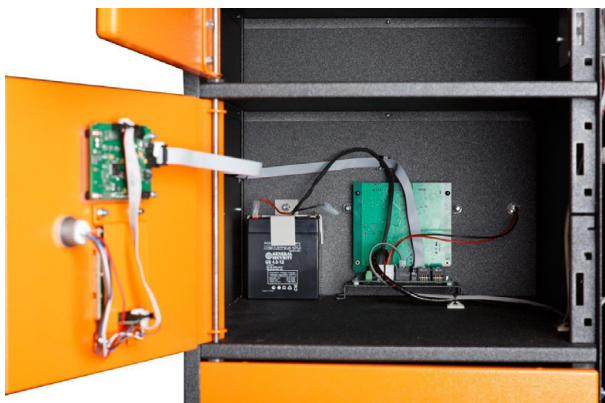 



SL0020 SERIES STORAGE LOCKERS ELECTRONIC LOCK INSTRUCTIONS

9. Shipping and storage

- Packed SLS can be shipped with all types of transport, which prevents water impact.
- Shipping conditions:
 - Air temperature from -40 to +50°C;
 - Relative humidity from 80% by the temperature + 25°C;
 - Atmospheric pressure from 630 to 800 mm.
- All the instructions indicated on the packaging must be fulfilled.
- The SLS must be storage in the packaging by the temperature from -40 to +40°C, with the level of relative humidity not more than 85%.
- The SLS must be storage in the dry place. The place must not contain conductive dust, acid or alkaline vapors.
- Distance between heating devices and SLS must be not less than 0,5 m.

10. Frequently asked questions

Problem	Solution
LCD-display doesn't work or shows incorrect message	<ol style="list-style-type: none">1. Check the connection of network and cables2. By incorrect indication on the display, reboot the system.3. Contact a retailer.
Opening and withdrawal doesn't work – door doesn't open/close	<ol style="list-style-type: none">1. Check the connection to the network2. Use the alarm opening of the cell (consult p.3).3. Contact a retailer.

11. Warranty: 1year.

12. Warranty obligation:

Warranty obligation. Are not extended on the mechanical damages caused by the exploitation and storing the product after purchasing, as well as by Non-compliance with the requirements indicated in this manual.

GUARANTEE REGISTRATION

Please submit your guarantee registration by visiting our website www.phoenixsafe.com and clicking on guarantee registration.

For further assistance or information please contact us on 0151 944 6444.

APEX HOUSE, 1 ORRELL MOUNT, LIVERPOOL, L20 6NS, UNITED KINGDOM | +44 (0)151 944 6444